

MAGLINK




BEFORE STARTING! MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY 8 THE SAFETY IS ENGAGED.




READ ALL INSTRUCTIONS BEFORE PROCEEDING TO AVOID LOSING ANY SMALL COMPONENTS.



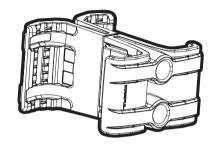


MAGLINK INSTALLATION AND USAGE INSTRUCTIONS

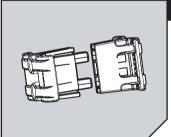

STEP 1; SEPARATE MAGLINK


Separate halves of *Maglink*. The rear half of the *Maglink* is labeled with the *Maglink logo* and "30-1" and the front half is labeled with the Magpul logo.

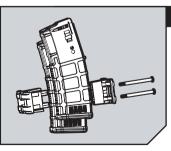

STEP 2: ALIGN MAGAZINES

Fit the front edge of each magazine into the front half of the Maglink, with the two magazines offset by one ribbing section. The magazine on the left, when viewed from the back, engages the slots in the Maglink with the two ribs nearest the magazine floorplate, and the magazine on the right engages the middle two ribs.

Install the back half of the *Maglink*, ensuring that the magazine ribs also engage the slots in the back half of the *Maglink*.

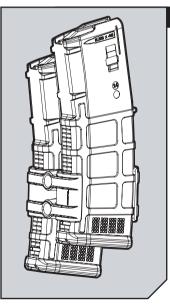

STEP 3: FINISH INSTALLATION

Insert two Slotted Pan-head Screws and tighten using a flat head screwdriver, being sure not to overtighten.

Caution: Overtightening may cause damage to the Maglink or Magazines.